

**QUICKLY  
DIAGNOSE**

Low-Voltage  
Control Problems  
**Thermostats**

**System Wiring**

**Control Boards**

**Associate Components**



**DURABLE**

Housed In A Latched  
Rugged Case



**VERSATILE**

Troubleshoot Any System &  
Act As A Remote Control



**EASY TO USE**

Simple Switches & Bright  
LED's



**SAVE CALLBACKS**

Diagnose the problem correctly  
the first time and every time!



**SAVE STEPS**


Acts as a remote control allowing  
techs to control system from roof  
or attic.



**SAVE TIME & MONEY**

Diagnose electronic control boards,  
voltage and continuity problems.

“We perform service in malls, office buildings, and shopping centers... using the ZebraStat as a remote control can save me a half-mile walk when testing and troubleshooting. Excellent Product!”  
-Customer Review/

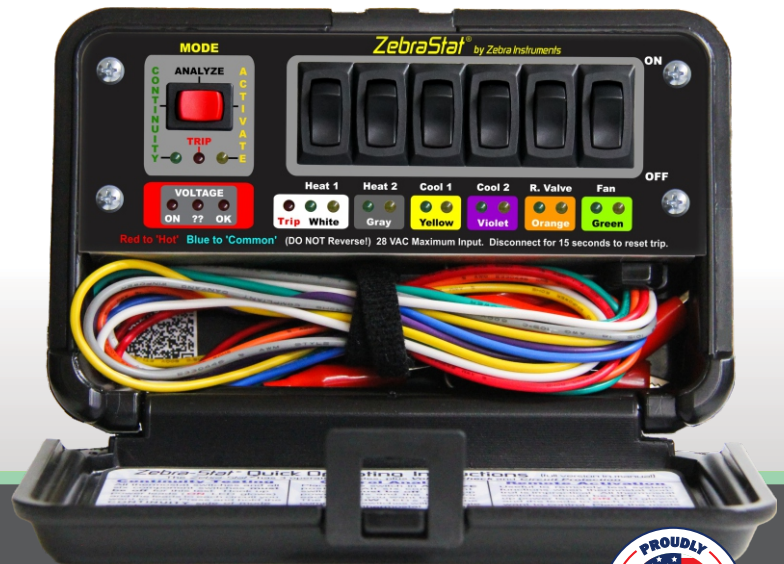

**By Techs, For Techs**



**Learn More**  
Product Info, Flyers, Manuals,  
& Instructions



**ZebraStat™**  
.com

# ZebraStat™

by Zebra Instruments™

One-Year Limited Warranty

## ZebraStat Control Panel



- 1 Three operating modes to choose from.
- 2 Six switches individually control specific parts of the system, such as blower or reversing valve.
- 3 13 LED's that report continuity or power on the six test circuits, and indicates if the system has tripped.
- 4 Continuously monitors the system's control voltage levels.

## The ZebraStat is a fully-electronic easy-to-use diagnostic tool



### How it Works

- ZebraStat allows the tech to analyze information coming directly from the system



### Functions

- **Check Continuity:** Simultaneously checks continuity in up to six circuits
- **Analyze:** Reports signal levels on control lines - visually displaying them
- **Remote Control:** Acts as a remote control, saving steps from basement, roof, or attic
- **Monitor:** Monitors voltage levels, graphically displays voltage conditions
- **Circuit Breaker:** Acts as an automatically-resetting circuit breaker, temporarily replacing a system fuse




### Features

- Housed in a rugged latched case, equipped with a hanging hook, and heavy magnet for easy use in cramped, small spaces
- Quick instruction card inside case lid
- Fully-Electronic: no battery ever required
- One-year limited warranty



### Learn More

Find product info, instructions, and more online at [ZebraStat.com](http://ZebraStat.com) (or by following the QR Code).

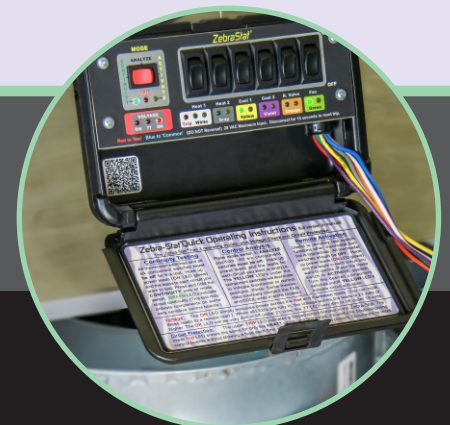

Zebra Instruments™  
[ZebraInstruments.com](http://ZebraInstruments.com)



Visit us on YouTube  
@ZebraInstruments